



redis

Campainha de vídeo recarregável

Número do artigo: WIFICDP20WT | WIFICDP20GY



Nedis BV
De Tweeling 28, 5215 MC's-Hertogenbosch, Holanda 20/11

Prefácio

Obrigado por adquirir o Nedis WIFICDP20WT | WIFICDP20GY.

Este documento é o manual do usuário e contém todas as informações para o uso correto, eficiente e seguro do produto.

Sempre guarde essas informações com o produto para uso futuro.

Descrição do produto

Uso pretendido

- O Nedis WIFICDP20XX é uma campainha de vídeo baseada em Wi-Fi que transmite vídeo e
- áudio gravados diretamente para o seu smartphone ou tablet.
- Este produto destina-se ao uso interno e externo.

Consulte as leis e regulamentos locais para câmeras de segurança antes de usar e instalar.
O produto não se destina a uso profissional.

Qualquer modificação do produto pode ter consequências para a segurança, garantia e bom funcionamento.

Especificações

 
produtos	Campainha de vídeo recarregável	
Número do artigo	WIFICDP20WT	WIFICDP20GY
Dimensões (lxwxh)	141 x 50 x 32 mm	



Compressão de vídeo	H.264	
Ângulo de visão	100 °	180 °
Sensor de imagem	Sensor CMOS de 1/4"	Sensor CMOS de 1/2,7"
Alcance de visão noturna	5,0 m	
Memória	Cartão MicroSD: Até 128 GB (não incluso)	
classificação IP	IP54 (à prova de respingos)	
Temperatura de trabalho	-20 - 50 °C	
Tipo de Bateria	1 x 18650 (íon de lítio)	2 x 18650 (íon de lítio)
Capacidade de carga	2600 mAh	5200 mAh
Duração da bateria	Até 2 meses em standby ou 200 gravações	Até 4 meses em standby ou 400 gravações
Entrada de energia	5 VCC; 2 A (Micro USB)	
Energia em espera	2 mA	
Faixa de frequência Wi-Fi	2412 - 2472 MHz	
Conexões sem fio	Wi-Fi e 433 MHz	
máx. potência de transmissão de rádio	18 dBm	
Campainha interna compatível	WIFICDPC10xx	
máx. distância entre a campainha e o carrilhão interno	20 - 30 metros	
LEDs infravermelhos	6pcs LEDs infravermelhos com 5 metros de visibilidade	



Partes principais(imagem A)

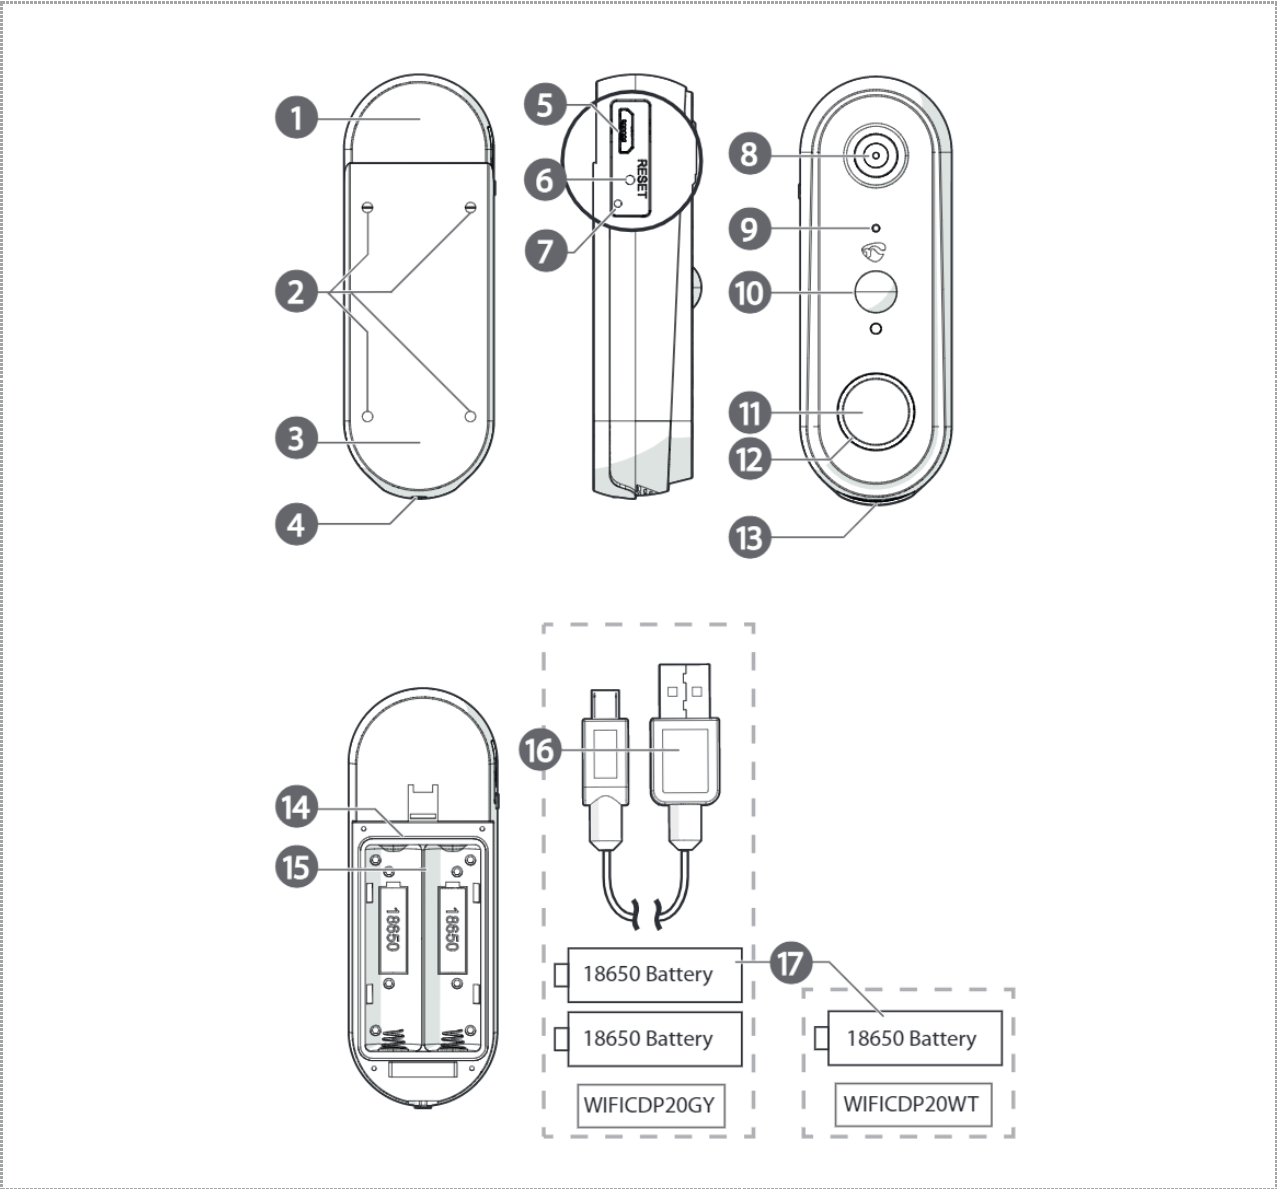

A

- 1 Tampa da bateria
- 2 Furos de montagem
- 3 Suporte de montagem
- 4 Parafuso hexagonal



7 LED indicador de carregamento

8 Lentes da câmera

9 Microfone

10 Sensor PIR

31 Botão de chamada

12 LED indicador de status

13 Palestrante

14 Slot para cartão MicroSD

15 Compartimento da bateria

32 18 31 Cabo micro USB

12 16 baterias

Instruções de segurança



AVISO

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.
- Only use the product as described in this document.
- Disconnect the product from the power source and other equipment if problems occur.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not drop the product and avoid bumping.
- In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.



- Seek medical advice immediately if a cell or a battery has been swallowed.
- Do not short-circuit a cell or a battery.
- Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
- Do not subject cells or batteries to mechanical shock.
- Use only the cell or battery in the application for which it was intended.
- Do not mix cells of different manufacture, capacity, size or type within a product.
- Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
- Battery usage by children should be supervised.
- Observe the plus (+) and minus (–) marks on the cell, battery and equipment and ensure correct use.
- Do not use any charger other than that specifically provided for use with the equipment.
- Do not leave a battery on prolonged charge when not in use.
- After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.
- Disconnect the power supply before making or breaking the connections to the battery.
- During charging, the battery must be placed in a well-ventilated area.
- Dispose of the cell or battery properly.
- When possible, remove the battery from the product when not in use.
- Clean the product regularly with a soft, clean, dry cloth. Avoid abrasives that can damage the surface.
- Do not use aggressive chemical cleaning agents such as ammonia, acid or acetone when cleaning the product.
- Consult the local laws and regulations for this product before installing and using.

Explanation of the symbols on the product or packaging

Icon	Description
	Product in which protection against electric shock does not rely on basic insulation only, but in which additional safety precautions such as double insulation or reinforced insulation are provided, there being no provision for protective earthing or reliance upon installation conditions. NOTE A Class II products may be provided with means for maintaining the continuity of protective circuits, provided that such



Installation

Check the contents of the package

Check that all parts are present and that no damage is visible on the parts. If parts are missing or damaged, contact the Nedis B.V. service desk via the website: www.nedis.com.

Preparing the product

1. Unscrew the hexagonal bolt **A4** from the bottom of the bracket
2. Unscrew the battery cover **A1** to open the product.
3. Optional: insert a microSD card (not included) into the microSD card slot **A14**, to locally store recordings.
4. Insert the required batteries into the battery compartment **A15**.



Observe the plus (+) and minus (–) marks on the cell, battery and equipment and ensure correct use.

- The status indicator LED **A12** blinks red to indicate the product is ready for installation.
- If **A12** doesn't blink blue, reset the product by holding the reset button **A6** with a pin for 5 seconds.

Mounting the product

- For stone walls:
 1. Hold the mounting bracket **A3** against the wall where you want to install the product.
 2. Mark the holes in **A3** on the wall with a pencil.
 3. Remove **A3** and drill the holes, using a drill with appropriate drill bit for the wall type.
 4. Insert plugs into the holes.
 5. Fasten **A3** to the wall by driving four screws into the plugs.
 6. Slide the product down onto **A3**.

For wooden walls:

 
1. Hold the mounting bracket **A3** against the wall where you want to install the product.
2. Fasten **A3** to the wall by driving four screws into the plugs.
3. Slide the product down onto **A3**.



1. Plug the micro USB cable **A16** into the micro USB port **A5**.
2. Plug the other end of **A16** into a USB adapter (not included).
3. Connect the USB power adapter to a power outlet.

The charging indicator LED **A7** lights up red to indicate the product is charging
A7 turns green to indicate that the product is fully charged.

Installing the Nedis SmartLife app

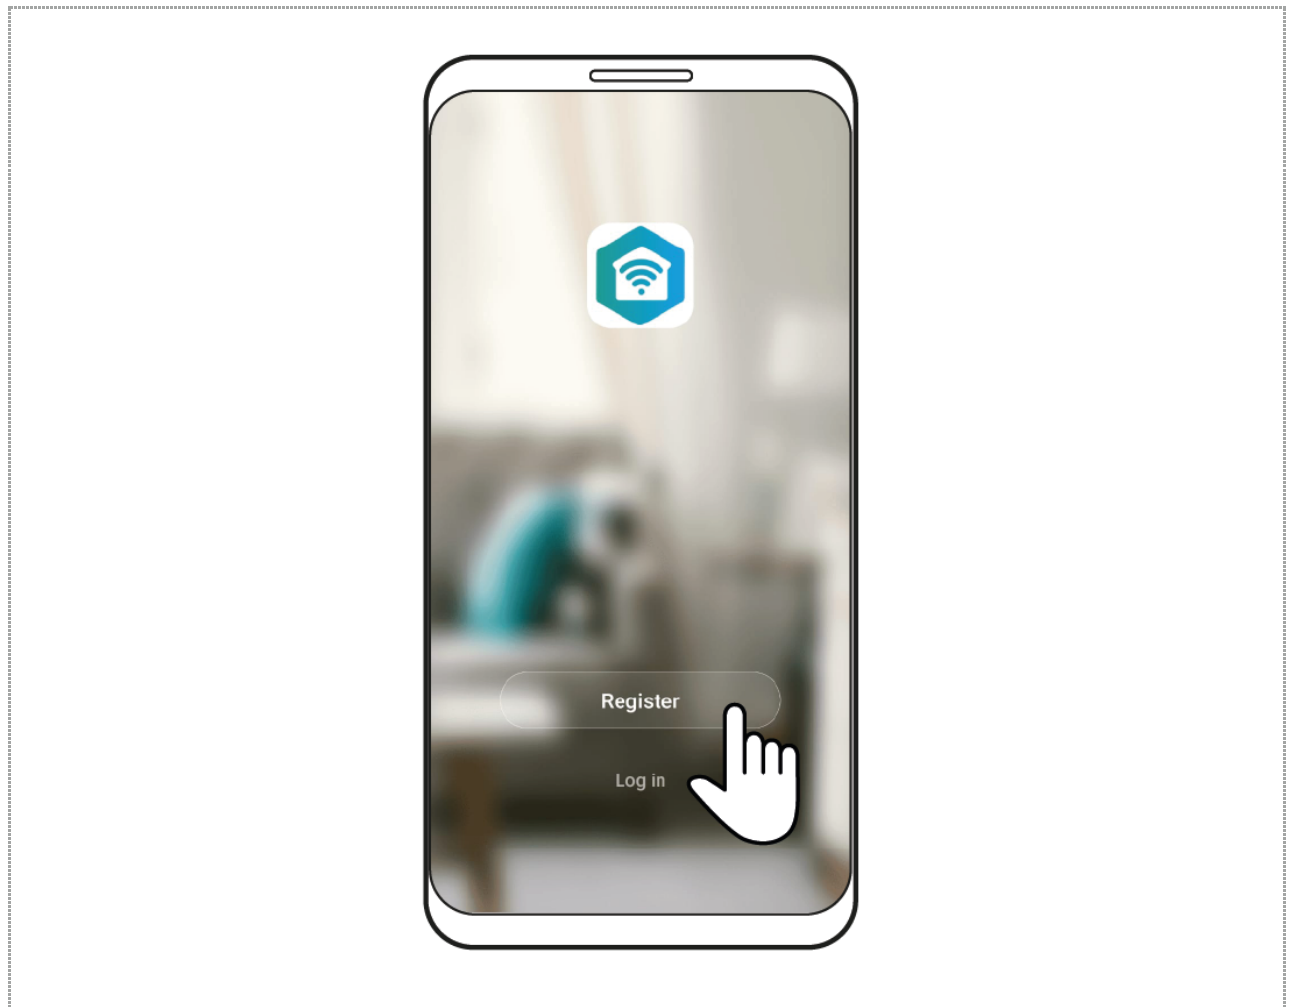


1. Download the Nedis Smartlife app for Android or iOS on your phone via Google Play or the Apple App Store.
2. Open the Nedis Smartlife app on your phone.
3. Create an account with your e-mail address and tap **Continue**.

You will receive a verification code on your e-mail address.

4. Enter the received verification code.
5. Create a password and tap **Done**.
6. Tap **Add Home** to create a SmartLife Home.

 Connecting the app

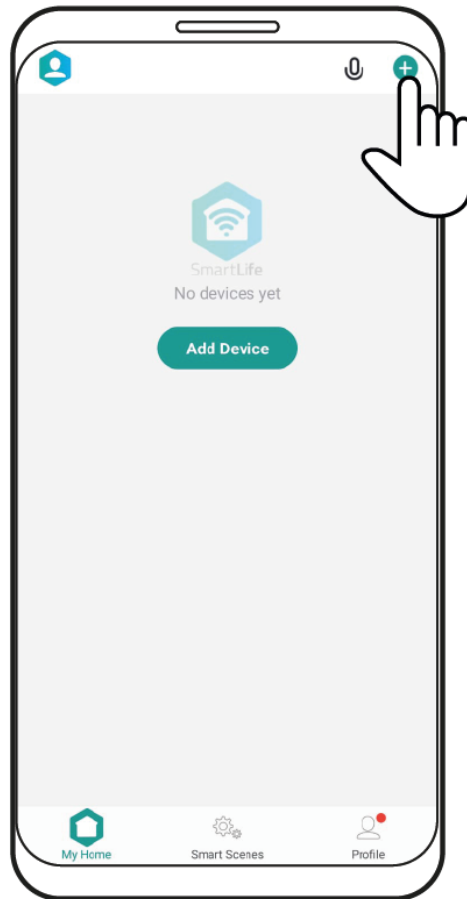

1. Tap **+** in the top right corner in the Nedis SmartLife app.
 2. Select the product type you want to add from the list.
 3. Confirm the status indicator LED **A12** is blinking.
 4. Enter the Wi-Fi network data and tap **Confirm**.
 5. Tap **Continue** and a QR-code will appear.
 6. Hold your phone with a 15 – 20 cm distance in front of the camera.
If the camera has detected the QR-code, you will hear a sound.
 7. Tap to confirm you heard the sound.
 8. Give the product a name and tap Done. **A12** turns blue. The product is now ready for use.
- If **A12** doesn't blink blue, reset the product by holding the reset button **A6** with a pin for 5 seconds.

Use



 
After making a successful connection with the security camera, the Nedis SmartLife app displays an overview of the products that are connected.

- Select the desired product in the overview.

The overview screen of the product (image B)

Here you can use the functions of the product and change the settings.

The interface consists of the following buttons:

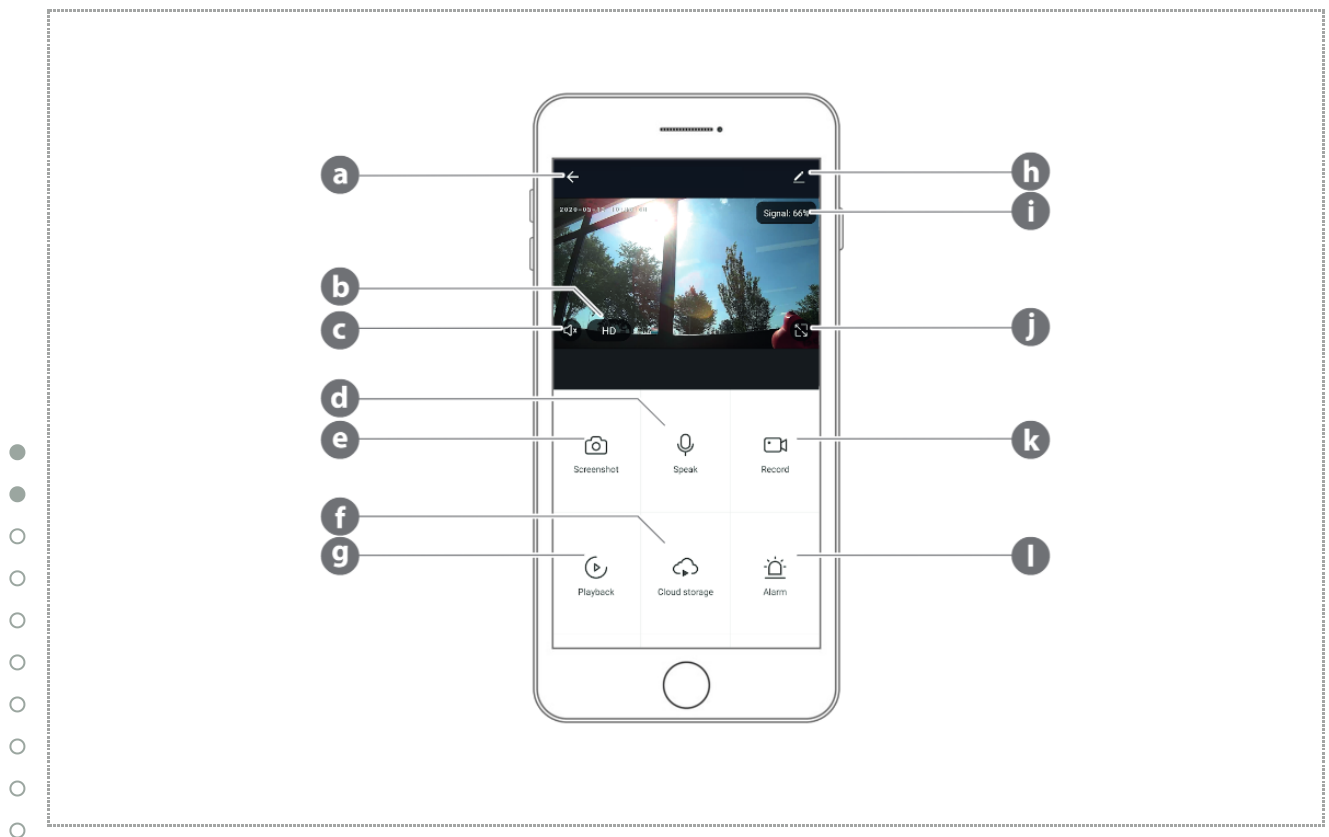

- Back
- The video mode.
- Turn the sound on or off
- Talk through the speaker **A13**
- Take a screenshot
- Cloud storage
- Play motion detected videos
- Settings
- Wi-Fi signal
- View full screen
- Start a video recording
- Alarm on/off

- You can make video recordings and screenshots on your phone, by tapping Record and Screenshot .

Playing back motion detected videos

Motion detected videos are automatically saved on the microSD card, if inserted.

- Tap Playback to open the stored videos.
- Select the day of the recording.
- Zoom and drag the timeline to select the recording.

Settings

Tap the settings key to open the settings screen.

● Modify product name	Change the name of the security camera.
● Share products	Share access to the product with others.
○ Product info	View information of the product.
○ Power manage	View the battery status and set the low battery signal.
○ Basic feature settings	Change the camera settings.
○ PIR switch	Adjust the sensitivity of the motion detection.
○ SD card settings	View the microSD card settings and set recording settings.
○ Feedback	Send product related feedback to Nedis.
○ Firmware info	View the version of the software.
○ Remove product	Remove the product from the Nedis SmartLife app.

Maintenance



Do not use aggressive chemical cleaning agents such as ammonia, acid or acetone when cleaning the product.

Do not clean the inside of the product.

Warranty

Any changes and/or modifications to the product will void the warranty. We accept no liability for damage caused by improper use of the product.

This product is designed for private use (normal domestic use) only. Nedis is not responsible for wear, defect and/or damages caused by commercial use of the product.

Disclaimer

Designs and specifications are subject to change without notice. All logos, brands and product names are trademarks or registered trademarks of their respective owners and are hereby recognized as such.

Disposal



This symbol indicates that this product should not be thrown away with other household waste throughout the EU. To prevent possible harm to the environment or human health by uncontrolled waste disposal, you are responsible for recycling it so that it can promote the sustainable reuse of raw materials. To return your used product, you can use the regular return and collection systems or contact the store where the product was purchased. They can recycle this product for the environment.

Declaration of Conformity

Declaration of Conformity



todos os padrões e regulamentos CE relevantes e todos os testes foram aprovados com sucesso. Isso inclui, mas não está limitado ao regulamento RED 2014/53/EU.

A Declaração de Conformidade completa (e a folha de dados de segurança, se aplicável) pode ser encontrada e baixada em:

[#support](https://nedis.com/WIFICDP20WT)

[#support](https://nedis.com/WIFICDP20GY)

Para obter informações adicionais sobre a conformidade, entre em contato com o serviço de atendimento ao cliente:

Web: www.nedis.com

E-mail: service@nedis.com

Telefone: +31 (0)73-5991055 (durante o horário comercial)

Nedis BV, de Tweeling 28

5215 MC's-Hertogenbosch, Holanda

