


Mounting the L-shaped aluminium mounting bracket

SOG® + SOG® II type A+B

for Thetford C2, C3, C4 and C200

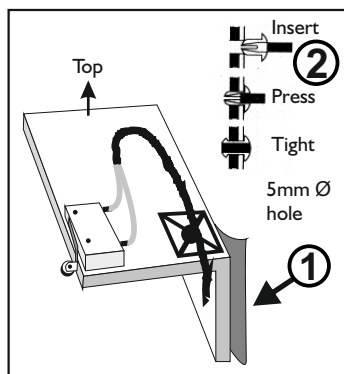

Mounting the L-shaped aluminium mounting bracket:

Before sticking, clean the mounting surface on the sheet metal wall with methylated spirit.

The bracket surface with the adhesive film must be fixed pointing downwards.

The aluminium L-bracket is mounted with the adhesive surface vertical and must be so placed that the roller on the microswitch (3), is pressed in on the back edge of the closed blade valve mechanism.

When the correct position has been found, remove the protective foil (1), from the adhesive surface of the L-shaped mounting bracket to mount it.

Reinforce with the expanding rivet (2). Bore a 5 mm hole from the service space side and push the rivet (2) in from the washroom side and press in the rod.

NOTE: When the switch is pressed the current is interrupted so that the ventilator only runs when the blade valve is open.

